




MULTILEVEL CHURCH TRUCK

Z521

MAIN FEATURES

- Lightweight, durable aluminum structure for the majored load capacity.
- Smooth and easy folding.
- Adjustable to 4 different height levels and 4 length sizes.
- Four pivoting wheels with 20 cm (7.9 in) diameter for better movement across uneven surface.
- Silent operation.

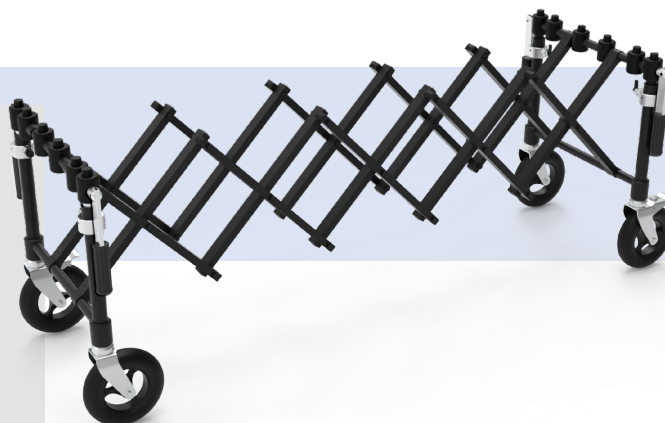

PRODUCT DESCRIPTION: Designed and manufactured in Italy, the Z521 multi-level church truck combines durability, intuitive design, and ease of use. The lightweight aluminum frame allows for easy maneuverability by a single operator, while stainless steel joints ensure lasting structural integrity. All moving parts are equipped with precision-lubricated nylon and Teflon rings, ensuring smooth and quiet opening and closing. It offers 4 adjustable height levels, ensuring maximum versatility for various liturgical or logistical needs, and supports a maximum load capacity of 454 kg (1000 lb), with a usable shelf length of up to 169 cm (66.5 in).

INTENDED USE: The Z521 church truck is designed for dignified and efficient transportation of coffins within churches and funeral settings.

POSITION 1



189 x 62,8 x 65,8 cm
74.4 x 24.7 x 25.9 in

POSITION 2



155,6 x 62,8 x 71,6 cm
61.3 x 24.7 x 28.2 in

POSITION 3



129 x 62,8 x 74,9 cm
50.8 x 24.7 x 29.5 in

POSITION 4



88,1 x 62,8 x 78,3 cm
34.7 x 24.7 x 30.8 in

1000 lb
454 kg

**LOAD
CAPACITY**

4

**ADJUSTABLE
LEVELS**

4

**ADJUSTABLE
LENGTH
SIZES**

TECHNICAL DATA

Code	ZC00865
Color	
Adjustable height	Position 1: 65,8 cm / 25.9 in Position 2: 71,6 cm / 28.2 in Position 3: 74,9 cm / 29.5 in Position 4: 78,3 cm / 30.8 in
Height when fully closed	80,3 cm / 31.6 in
Width (handles open)	106,5 cm / 41.9 in
Width (handles closed)	62,8 cm / 24.7 in
Adjustable length (wheels in service position)	Position 1: 189 cm / 74.4 in Position 2: 155,6 cm / 61.3 in Position 3: 129 cm / 50.8 in Position 4: 88,1 cm / 34.7 in
Total length when fully closed	21,5 cm / 8.5 in
Wheels dimensions	Ø 20 cm / Ø 7.9 in
Brakes	2
Weight	20,1 kg / 44.4 lb
Loading capacity	454 kg / 1000 lb
Frame material	Aluminum

Note: Dimensions and weight are subject to tolerances of $\pm 0,5$ cm (0.19 in) and $\pm 0,5$ kg (1.10 lb) respectively.

STORAGE SPACE



21,5 x 62,8 x 80,3 cm
8.5 x 24.7 x 31.6 in

ACCESSORIES



ZC00831

BAG FOR FUNERAL TROLLEY

Dimensions: 84 x 53 x 20 cm
(33 x 20.9 x 7.9 in)
Weight: 200 g (0.4 lb)
Material: Black PVC

Rev.0 (30/09/2025)
UNCERTIFIED COPY

©Copyright - This document is property of SPENCER ITALIA S.r.l and can't be reproduced, used and disclosed without the written approval of SPENCER ITALIA SRL.

Spencer Italia s.r.l. a socio unico soggetta a direzione e coordinamento da Protect Medical Holding GmbH
Via Provinciale, n° 12 - 43038 Sala Baganza (PR) Italy - +39 0521 541111 - info@spencer.it - www.spencer.it